

Panaboard UB-2815C / UB-2315C Checked SD Memory Card List

Storing image in the following SD memory cards have been confirmed with the Panaboard UB-2815C / UB-2315C.

Brand(Maker)	Model	Capacity	Remarks
Panasonic	RP-SD008B	8MB	
	RP-SD016B	16MB	
	RP-SD032B	32MB	
	RP-SD064B	64MB	
	RP-SD128B (HIGH SPEED)	128MB	
	RP-SD256B (HIGH SPEED)	256MB	
	RP-SDH256 (SUPER HIGH SPEED)	256MB	
	RP-SDH512	512MB	
	RP-SDH01G	1GB	
	RP-SDH256R	256MB	
	RP-SDK512 (PRO HIGH SPEED)	512MB	
	RP-SDK01G (PRO HIGH SPEED)	1GB	
	RP-SDK02G (PRO HIGH SPEED)	2GB	
	RP-SDQ01G (HIGH SPEED)	1GB	
	RP-SDQ02G (HIGH SPEED)	2GB	
	RP-SDQ256	256MB	
	RP-SDQ512	512MB	
	PR-SDR512	512MB	
	RP-SDR01G	1GB	
	RP-SDR02G	2GB	
	RP-SS008B	8MB	miniSD (It is necessary to set into the SD adapter.)
	RP-SS016B	16MB	miniSD (It is necessary to set into the SD adapter.)
	RP-SS032B	32MB	miniSD (It is necessary to set into the SD adapter.)
	RP-SS064B	64MB	miniSD (It is necessary to set into the SD adapter.)
	RP-SS128B	128MB	miniSD (It is necessary to set into the SD adapter.)
	RP-SS256B	256MB	miniSD (It is necessary to set into the SD adapter.)
	RP-SS512B	512MB	miniSD (It is necessary to set into the SD adapter.)
	RP-SS01GB	1GB	miniSD (It is necessary to set into the SD adapter.)
	RP-SDM01GL1A	1GB	
	RP-SDM02GL1A	2GB	
	RP-SDV01GL1A	1GB	
	RP-SDV02GL1A	2GB	
	RP-SM02GCJ1K	2GB	microSD (It is necessary to set into the SD adapter.)
	RP-SDP02GJ1K	2GB	*1
RP-SM02GFJ1K	2GB	microSD (It is necessary to set into the SD adapter.) *1	
SD-M08	8MB		
SD-M16	16MB		
SD-M32	32MB		
SD-M6403M	64MB		
SD-M128	128MB		
SD-M256R	256MB		
SD-M5124R	512MB		
SD-NA001GT	1GB		

TOSHIBA	SD-NA002GT	2GB	
	SD-FA128MT	128MB	
	SD-FA256MT	256MB	
	SD-FA512MT	512MB	
	SD-S3203R	32MB	miniSD (It is necessary to set into the SD adapter.)
	SD-S6403R	64MB	miniSD (It is necessary to set into the SD adapter.)
	MSD-N128MT	128MB	miniSD (It is necessary to set into the SD adapter.)
	MSD-N256MT	256MB	miniSD (It is necessary to set into the SD adapter.)
	MSD-N512MT	512MB	miniSD (It is necessary to set into the SD adapter.)
	MSD-N001GT	1GB	miniSD (It is necessary to set into the SD adapter.)
	SD-E002G4	2GB	
	SD-E002GR	2GB	
SanDisk	SDSDB-16-801	16MB	
	SDSDB-32-801	32MB	
	SDSDB-64-801	64MB	
	SDSDB-128-801	128MB	
	SDSDB-256-801	256MB	
	SDSDB-512-801	512MB	
	SDSDB-1024-801	1GB	
	SDSDB-1024-J60	1GB	
	SDSDB-2048-J60	2GB	
	SDSDH-256-903	256MB	
	SDSDH-512-903	512MB	
	SDSDH-1024-903	1GB	
	SDSDX3-1024-903	1GB	
	SDSDPH-512-903	512MB	
	SDSDPH-1024-903	1GB	
	SDSDM-32-801	32MB	miniSD (It is necessary to set into the SD adapter.)
	SDSDM-64-801	64MB	miniSD (It is necessary to set into the SD adapter.)
	SDSDM-128-J60M	128MB	miniSD (It is necessary to set into the SD adapter.)
	SDSDM-256-J60M	256MB	miniSD (It is necessary to set into the SD adapter.)
	SDSDM-512-J60M	512MB	miniSD (It is necessary to set into the SD adapter.)
	SDSDM-1024-J60M	1GB	miniSD (It is necessary to set into the SD adapter.)
	SDSDB-1024-J95	1GB	
	ultra II	2GB	
SDSDQ-002GS-J95M	2GB	microSD (It is necessary to set into the SD adapter.)	
SDSDQ-002G-J35A	2GB	microSD (It is necessary to set into the SD adapter.)	
SDSDB-2048-J95	2GB	*1	
	AF32SD	32MB	
	AF64SD	64MB	
	AF128SD	128MB	
	AF256SD	256MB	
	AF512SD	512MB	
	AF1GSD	1GB	
	AF2GSD	2GB	
	AF128SDP (ProMax-128M)	128MB	
	AF256SDP (ProMax-256M)	256MB	
	AF512SDP (ProMax-512M)	512MB	

ATP	AF1GSDP (ProMax-1G)	1GB	
	AF2GSDP (ProMax-2G)	2GB	
	AF32MD	32MB	miniSD (It is necessary to set into the SD adapter.)
	AF64MD	64MB	miniSD (It is necessary to set into the SD adapter.)
	AF128MD	128MB	miniSD (It is necessary to set into the SD adapter.)
	AF256MD	256MB	miniSD (It is necessary to set into the SD adapter.)
	AF512MD	512MB	miniSD (It is necessary to set into the SD adapter.)
	AF128MDP (ProMax-128M)	128MB	miniSD (It is necessary to set into the SD adapter.)
	AF256MDP (ProMax-256M)	256MB	miniSD (It is necessary to set into the SD adapter.)
	AF512MDP (ProMax-512M)	512MB	miniSD (It is necessary to set into the SD adapter.)
	AF1GMDP (ProMax-1G)	1GB	miniSD (It is necessary to set into the SD adapter.)
GREEN HOUSE	GH-SDC32MB	32MB	
	GH-SDC-64MB	64MB	
	GH-SDC-128MB	128MB	
	GH-SDC32MD	32MB	
	GH-SDC64MD	64MB	
	GH-SDC128MD	128MB	
	GH-SDC256MD	256MB	
	GH-SDC512MD	512MB	
	GH-SDC1GD	1GB	
	GH-SDC32ME	32MB	
	GH-SDC64ME	64MB	
	GH-SDC128ME	128MB	
	GH-SDC256ME	256MB	
	GH-SDC512ME	512MB	
	GH-SDC1GE	1GB	
	GH-SDC256MX	256MB	
	GH-SDC512MX	512MB	
	GH-SDC1GX	1GB	
	GH-SDC2GX	2GB	
	GH-SDCM32M	32MB	miniSD (It is necessary to set into the SD adapter.)
	GH-SDCM64M	64MB	miniSD (It is necessary to set into the SD adapter.)
	GH-SDCM128M	128MB	miniSD (It is necessary to set into the SD adapter.)
	GH-SDCM256M	256MB	miniSD (It is necessary to set into the SD adapter.)
	GH-SDCM512M	512MB	miniSD (It is necessary to set into the SD adapter.)
	GH-SDCM1G	1GB	miniSD (It is necessary to set into the SD adapter.)
	GH-SDC1GG	1GB	
GH-SDC2G6X	2GB		
LEXER	SD032231	32MB	
	SD064231	64MB	
	SD128231	128MB	
	SD256231	256MB	
	SD512231	512MB	
	SDM032231	32MB	miniSD (It is necessary to set into the SD adapter.)
	SDM064231	64MB	miniSD (It is necessary to set into the SD adapter.)
	SDM128231	128MB	miniSD (It is necessary to set into the SD adapter.)
	Professional (SD1GB-133-810)	1GB	
	Professional (SD2GB-133-810)	2GB	

	LSD2GBDRBJP133 (Rev A)	2GB	
	LSD2GBACJP (Rev A)	2GB	
	LSDMI2GBACJP (Rev A)	2GB	microSD (It is necessary to set into the SD adapter.)
KINGMAX	SDC-128M	128MB	
	SDC-256M	256MB	
	SDC-512M	512MB	
	SDC-1GB	1GB	
	MSD-64M	64MB	miniSD (It is necessary to set into the SD adapter.)
	MSD-128M	128MB	miniSD It is necessary to set into the SD adapter.)
	MSD-256M	256MB	miniSD (It is necessary to set into the SD adapter.)
	MSD-512M	512MB	miniSD (It is necessary to set into the SD adapter.)
Power Global (PQI)	QSD-32	32MB	
	QSD-64	64MB	
	QSD-128	128MB	
	QSD-256	256MB	
	QSD-512	512MB	
	QSD-1G	1GB	
	QSD15-512	512MB	
	QSD15-1G	1GB	
	QSD15-2G	2GB	
Princeton	PSD-32	32MB	
	PSD-64	64MB	
	PSD-128	128MB	
	PSDS-128 (Xpert series)	128MB	
	PSDS-256 (Xpert series)	256MB	
	PSDS-512 (Xpert series)	512MB	
	PSDS-1G (Xpert series)	1GB	
	PFU-MH/2B	2GB	
I-O DATA	PCSD-64MS	64MB	
	PCSD-128MS	128MB	
	PCSD-256MS	256MB	
	PCSD-512MS	512MB	
	SD-64M	64MB	
	SD-256M	256MB	
	SD-512M	512MB	
	SD-1G	1GB	
	SD-32M	32MB	
	SD-128M	128MB	
	SD10-256M	256MB	
	SD20-512M	512MB	
	SD20-1G	1GB	
	SD20H-512MA	512MB	
	SD20H-1GA	1GB	
	SD20H-2GA	2GB	
	SDM-32M/A	32MB	miniSD (It is necessary to set into the SD adapter.)
	SDM-64M/A	64MB	miniSD (It is necessary to set into the SD adapter.)
	SDM-128M/A	128MB	miniSD (It is necessary to set into the SD adapter.)
	SDM-256M/A	256MB	miniSD (It is necessary to set into the SD adapter.)

	SDM-512M	512MB	miniSD (It is necessary to set into the SD adapter.)
	SDM-1G	1GB	miniSD (It is necessary to set into the SD adapter.)
	SD-F1G	1GB	
	SD-S2G	2GB	
HAGIWARA SYS-COM	HPC-SD16M	16MB	
	HPC-SD32M	32MB	
	HPC-SD64M	64MB	
	HPC-SD128M	128MB	
	HPC-SD256M	256MB	
	HPC-SD512M	512MB	
	HPC-SD1GM	1GB	
	HNT-MR2GTA	2GB	microSD (It is necessary to set into the SD adapter.)
BUFFALO	RSDC-128M	128MB	
	RSDC-256M	256MB	
	RSDC-L256M	256MB	
	RSDC-512M	512MB	
	RSDC-G-2G	2GB	
	RSDM-32M	32MB	miniSD (It is necessary to set into the SD adapter.)
	RSDM-64M	64MB	miniSD (It is necessary to set into the SD adapter.)
	RSDM-128M	128MB	miniSD (It is necessary to set into the SD adapter.)
	RSDM-256M	256MB	miniSD (It is necessary to set into the SD adapter.)
	RSDM-512M	512MB	miniSD (It is necessary to set into the SD adapter.)
	RSDM-1G	1GB	miniSD (It is necessary to set into the SD adapter.)
	RSDM-2G	2GB	miniSD (It is necessary to set into the SD adapter.)
	RSDC-S1GC4	1GB	
	RSDC-G2GC6	2GB	
	RSDC-S2GC4	2GB	*1
Sony	SF-2N1	2GB	*1
	SR-2A1	2GB	microSD (It is necessary to set into the SD adapter.) *1
Transcend	TS32MSDC	32MB	
	TS64MSDC	64MB	
	TS128MSDC	128MB	
	TS256MSDC	256MB	
	TS512MSDC	512MB	
	TS128MSD45	128MB	
	TS256MSD45	256MB	
	TS512MSD45	512MB	
	TS1GSD45	1GB	
	TS256MSD	256MB	
	TS512MSD	512MB	
	TS1GSD60	1GB	
	TS2GSD150	2GB	
	TS128MSD	128MB	miniSD (It is necessary to set into the SD adapter.)
	TS256MSD	256MB	miniSD (It is necessary to set into the SD adapter.)
	TS512MSD	512MB	miniSD (It is necessary to set into the SD adapter.)
	TS256MSDM80	256MB	miniSD (It is necessary to set into the SD adapter.)
	TS512MSDM80	512MB	miniSD (It is necessary to set into the SD adapter.)
	TS1GSDM80	1GB	miniSD (It is necessary to set into the SD adapter.)

	TS128MUSD	128MB	miniSD (It is necessary to set into the SD adapter.)
	TS2GSDC	2GB	
	TS2GUSD-1	2GB	microSD (It is necessary to set into the SD adapter.)
ADTEC	AD-SDPS32	32MB	
	AD-SDPS64	64MB	
	AD-SDPS128	128MB	
	AD-SDPS256	256MB	
	AD-SDPS512	512MB	
	AD-SDPS1G	1GB	
	AD-MSDP32	32MB	miniSD (It is necessary to set into the SD adapter.)
	AD-MSDP64	64MB	miniSD (It is necessary to set into the SD adapter.)
	AD-MSDP128	128MB	miniSD (It is necessary to set into the SD adapter.)
	AD-MSDP256	256MB	miniSD (It is necessary to set into the SD adapter.)
ELECOM	MF-FSD064	64MB	
	MF-FSD128	128MB	
	MF-FSC256	256MB	
	MF-FSC512	512MB	
	MF-FSD1G	1GB	
	MF-FMISD064	64MB	miniSD (It is necessary to set into the SD adapter.)
	MF-FMISD128	128MB	miniSD (It is necessary to set into the SD adapter.)
	MF-FMISD256	256MB	miniSD (It is necessary to set into the SD adapter.)
	MF-FMISD512	512MB	miniSD (It is necessary to set into the SD adapter.)
	MF-FSD02GC4	2GB	
	MF-FSD02GC6	2GB	
	MF-NMSSD02GPN	2GB	microSD (It is necessary to set into the SD adapter.)
Logitec	LMC-SD64	64MB	
	LMC-SD128	128MB	
	LMC-SD256	256MB	
	LMC-SD512	512MB	
	LMC-SD1G	1GB	
	LMC-MSD32	32MB	miniSD (It is necessary to set into the SD adapter.)
	LMC-MSD64	64MB	miniSD (It is necessary to set into the SD adapter.)
	LMC-MSD128	128MB	miniSD (It is necessary to set into the SD adapter.)
	LMC-MSD256	256MB	miniSD (It is necessary to set into the SD adapter.)
HansaTech	HBR-SD256MA	256MB	
	HBR-SD512MA	512MB	
	HBR-SD001GA	1GB	
	HBR-SD002GA	2GB	
	HBR-SD001GH	1GB	
	HBR-SD002GH	2GB	
	HBR-MSD064MA	64MB	miniSD (It is necessary to set into the SD adapter.)
	HBR-MSD128MA	128MB	miniSD (It is necessary to set into the SD adapter.)
	HBR-MSD256MA	256MB	miniSD (It is necessary to set into the SD adapter.)
	HBR-MSD512MA	512MB	miniSD (It is necessary to set into the SD adapter.)
	HBR-MS001GA	1GB	miniSD (It is necessary to set into the SD adapter.)
TDK	TS032VS	32MB	
	TS064VS	64MB	
	TS0128VS	128MB	
	TS256VS	256MB	

	TS512VS	512MB	
MICRODIA	42Xtra128MB	128MB	
	42Xtra256MB	256MB	
	42Xtra512MB	512MB	
	42Xtra128MB	128MB	miniSD (It is necessary to set into the SD adapter.)
NHJ	Kitty-sd-128	128MB	
	Kitty-sd-256	256MB	
KEIAN	PSd-512M	512MB	
	PSd-1G	1GB	
	PSd-2G	2GB	
Simple Tech	STI-SD/64	64MB	
	STI-SD/128	128MB	
	STI-SD/256	256MB	
	STI-SD/512	512MB	
FUJIFILM	SD F 32MB A	32MB	
	SD F 64MB A	64MB	
	SD F 128MB A	128MB	
SHARP	CE-SD32	32MB	
	CE-SD64	64MB	
Victor(JVC)	CU-SD008	8MB	
Canon	SDC-8M	8MB	
RICHO	FM-8SD	8MB	
PNY	PSD256	256MB	
MakroMarkt	MakroMarkt SD 512MB	256MB	
extre	extre memory 128MB	128MB	
FUJI FILM	F SD-002G-C4A	2GB	
SILICON POWER	SP002GBSDC045V10	2GB	
	SP002GBSDT000V10	2GB	microSD (It is necessary to set into the SD adapter.)

*1. The firmware upgrade is required to use the SD card.
As to the firmware upgrade please contact your local Panasonic sales company.

The following SD memory cards are not available for the Panaboard UB-2815C / UB-2315C.

Brand(Maker)	Model	Capacity	Remarks
Princeton	Xpert plus	2GB	The electronic board might re-start when this media are inserted in the SD card slot.

Note:

miniSD Logo is a trademark of SD Card Association. SD Logo is a trademark.

All brands and product names are trademarks or registered trademarks of their respective companies.