

elite Panaboard Revision History (19th/November/2010)

for UB-T880 / UB-T880W

(c) Panasonic System Networks Co., Ltd. 2010

elite Panaboard software

Ver.	Changing issue(s) / Fixing problem(s)	Note
4.00	1. First Release	
4.01	1. (Fix) Shutting down cannot be done while elite Panaboard software is running. 2. (Fix) When the rotary switch of electronic pen is selected Highlighter or Eraser, disable icons of Function Menu can be selected.	
4.02	1. (Fix) When it draws whit electronic pen, the range for character recognition is not selected easily. 2. The fall prevention alert was displayed. 3. (Fix) Repetition gallery and wrong gallery 4. (Fix) Error occur when launching recorder in Windows Vista (KN edition).	
4.03	1. (Fix) The reproduction stops when drawing on flash video. 2. (Fix) Circle is displayed by a short tap at the drawing mode in Windows 7. 3. (Fix) The icon of the menu is hidden by the list. 4. (Fix) Shutdown is done without the confirmation of saving file while editing. 5. (Fix) The calibration and the pen cannot work even if the drawing tool is started when shutdown is stopped by the application program such as Microsoft Word. 6. (Fix) When the drawing tool is closed, the calibration cannot be executed. 7. (Fix) The pen menu doesn't close when the list of a highlighter or eraser is selected. 8. (Fix) The very short line cannot be written in Windows 7. 9. (Fix) The screen saver starts while drawing by electronic pen, second or third finger. 10. (Fix) Two objects are duplicated by "Infinite Clone".	
4.10	1. (Change Spec) It supported the Electronic pen with the mouse mode. 2. (Change Spec) It changed to be able to operate the pen menu with a finger and the mouse. 3. (Change Spec) It made a common use of the settings of the pen menu of the same Electronic pen. 4. (Fix) It did not become effective till elite Panaboard software was rebooted, even if the settings of the Option dialog was set.	

elite Panaboard book

Ver.	Changing issue(s) / Fixing problem(s)	Note
4.00	1. First Release	
4.01	1. (Fix) When the rotary switch of electronic pen is selected Highlighter or Eraser, disable icons of Function Menu can be selected. 2. (Fix) Changing some folder name and file name of gallery.	
4.02	1. (Fix) The operation slows if a lot of picture files are inserted. 2. (Fix) The frame of "Zoom In" or "Zoom Out" is not displayed. 3. (Fix) The inserted file short cut doesn't open. 4. (Fix) Operation slows if it draws on the video.	
4.10	1. (Fix) If a object playing sound was erased, the object disappeared, sound was still played.	

Installer

Ver.	Changing issue(s) / Fixing problem(s)	Note
4.00.015	1. First Release	
4.01.001	1. Build the Package for the Web.	
4.02.005	1. The icon pattern selection window is added.	
4.03.001	1. The installation time has been shortened.	
4.10.005	1. Download file size was reduced, by removing the gallery.	
4.10.006	1. "Eraser" (next to "Low-Power mode") can be used as the "Mouse".	

Notes of Software Installation on Windows Vista or Windows 7

1. If the User Account Control window is displayed, select [Allow].

***It is necessary to restart your computer when the installation has been finished.**

*Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

* All other trademarks identified herein are the property of their respective owners.