

Panasonic®

Installation Manual

Additional Cordless Handset

Model No. **KX-TPA50** **B61**



Thank you for purchasing a Panasonic product.

This unit is an additional handset compatible with the following series of Panasonic SIP Cordless Phone:

KX-TGP500/KX-TGP550

You must register this handset with your base unit before it can be used. This installation manual describes only the steps needed to register and begin using the handset. For further details, please read the base unit's User Guide on the Panasonic Web site at:

<http://panasonic.net/pcc/support/sipphone/>

Charge the batteries for about 6 hours before initial use.

This cordless telephone is possible to use according to General licence No.: VO-R/8/08.2005-23.

Please read this installation manual before using the unit and save it for future reference.

Accessory information

Supplied accessories

Accessory item/Part number	Quantity
Charger	1
AC adaptor/PQLV219CE	1
Rechargeable batteries ^{*1} /HHR-65AAAB	2
Handset cover ^{*2}	1
Belt clip	1

*1 Please read the replacement battery information section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

 
*2 The handset cover comes attached to the handset.

Note:

- Please read the additional/replacement accessory section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

Setting up

Connections

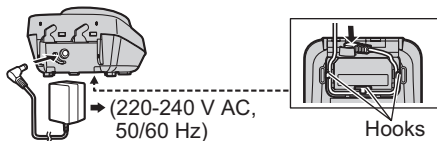

Note:

- Use only the supplied Panasonic AC adaptor PQLV219CE.

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

 
Battery installation/Battery charge

Important:

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted in the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.
- Wipe the battery ends (⊕, ⊖) with a dry cloth.
- Avoid touching the battery ends (⊕, ⊖) or the unit contacts.
- Confirm correct polarities (⊕, ⊖).
- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Charge for about 6 hours.

- When the batteries are fully charged, the charge indicator goes off.

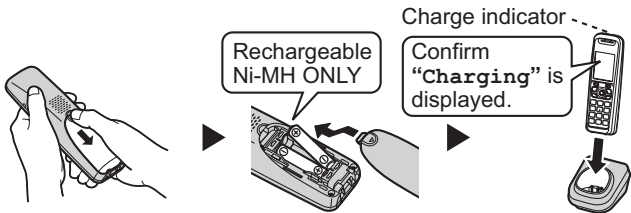

Note:

- If the batteries are fully charged, but the operating time seems to be shorter, clean the battery ends (⊕, ⊖) and the charge contacts with a dry cloth and charge again.

Registering a handset to the base unit

1 Base unit:

■ KX-TGP500 series

Press and hold **[**]** for about 4 seconds until the **[]** indicator flashes in red.

■ KX-TGP550 series

Press and hold **[*]]** for about 4 seconds until the registration tone sounds and the **[]** indicator flashes in red.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

2 Handset:



3 Wait until “Enter Base PIN” is displayed. → Enter the base unit PIN (default: “0000”). → Press **OK**, then wait until a long beep sounds.

- If you forget your PIN, contact your service provider.

Note:

- If an error tone sounds, or if **Y** is still displayed, register the handset according to the registering section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

Display language

 
1 **[]** (centre of joystick) → **[#][1][1][0]**

2 **[v]/[^]**: Select the desired setting.

3 Press down the centre of the joystick to save. → **[x]**

Belt clip

■ To attach

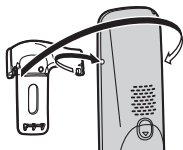


■ To remove



Wall mounting

 - 1 Drive the screws (not supplied) into the wall.
- 2 Mount the charger (1), then slide it down (2) and to the right (3) until it is secure.

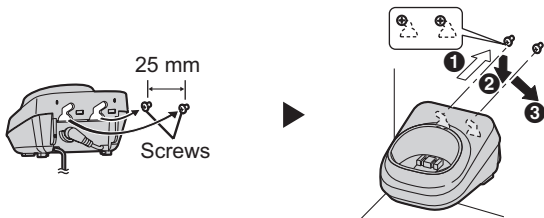

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact your service provider.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.

Operating safeguards

- The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.

CAUTION

Installation and relocation

- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.

Battery

- We recommend using the supplied batteries or additional/replacement batteries noted in the battery information section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible charger to charge the batteries. Do not tamper with the charger. Failure to follow these instructions may cause the batteries to swell or explode.

Other information

- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as

phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

General information

- In the event of problems, you should contact your service provider in the first instance.

Declaration of Conformity:

 
- Panasonic System Networks Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC. Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://www.doc.panasonic.de>

Contact to Authorised Representative:

Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

Information for Users on Collection and Disposal of Old Equipment and used Batteries

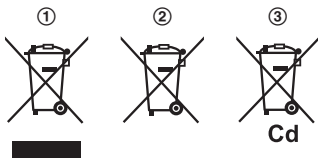

These symbols (①, ②, ③) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to

applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

These symbols (①, ②, ③) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol (③). In this case it complies with the requirement set by the Directive for the chemical involved.

CE0682

Panasonic Czech Republic, s.r.o.

Thámová 289/13 (Palác Karlín)

186 00 Praha 8

Panasonic System Networks Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2010

PNQX2651ZA DM0310SY0