

Panasonic®

Installation Manual

Additional Cordless Handset

Model No. **KX-TPA50** **B08**



Thank you for purchasing a Panasonic product.

This unit is an additional handset compatible with the following series of Panasonic SIP Cordless Phone:
KX-TGP500/KX-TGP550

You must register this handset with your base unit before it can be used. This installation manual describes only the steps needed to register and begin using the handset. For further details, please read the base unit's User Guide on the Panasonic Web site at:

<http://panasonic.net/pcc/support/sipphone/>

Charge the batteries for about 6 hours before initial use.

Please read this installation manual before using the unit and save it for future reference.

Accessory information

Supplied accessories

Accessory item/Part number	Quantity
Charger	1
AC adaptor/PQLV219AL	1
Rechargeable batteries* ¹ / HHR-65AAAB or N4DHYYY00003	2
Handset cover* ²	1
Belt clip	1

*1 Please read the replacement battery information section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

 
*2 The handset cover comes attached to the handset.

Note:

- Please read the additional/replacement accessory section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

Setting up

Connections

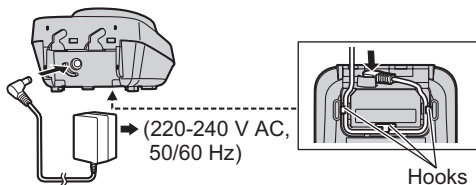

Note:

 
- Use only the supplied Panasonic AC adaptor PQLV219AL.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)

Battery installation/Battery charge**Important:**

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted in the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.
- Wipe the battery ends (⊕, ⊖) with a dry cloth.
- Avoid touching the battery ends (⊕, ⊖) or the unit contacts.
- Confirm correct polarities (⊕, ⊖).
- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Charge for about 6 hours.

- When the batteries are fully charged, the charge indicator goes off.

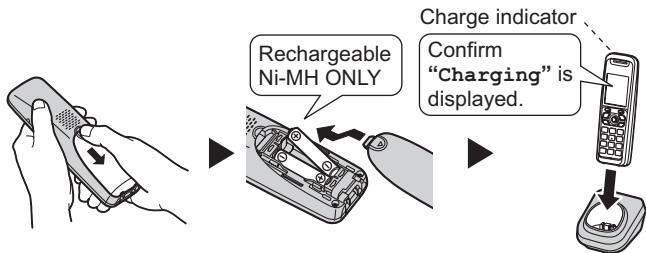**Note:**

- If the batteries are fully charged, but the operating time seems to be shorter, clean the battery ends (⊕, ⊖) and the charge contacts with a dry cloth and charge again.

Registering a handset to the base unit

1 Base unit:

■ KX-TGP500 series

Press and hold **[ALL]** for about 4 seconds until the STATUS indicator flashes in red.

■ KX-TGP550 series

Press and hold **[ALL]** for about 4 seconds until the registration tone sounds and the STATUS indicator flashes in red.

- If all registered handsets start ringing, press the same button to stop. Then repeat this step.
- The next step must be completed within 90 seconds.

2 Handset:

[OK]

3 Wait until “Enter Base PIN” is displayed. → Enter the base unit PIN (default: “0000”). → Press **[OK]**, then wait until a long beep sounds.

 
- If you forget your PIN, contact your phone system dealer.

Note:

- If an error tone sounds, or if ∇ is still displayed, register the handset according to the registering section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL.

Belt clip

■ To attach

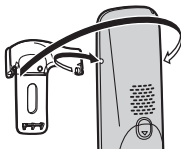


■ To remove



Wall mounting

 - 1 Drive the screws (not supplied) into the wall.
- 2 Mount the charger (1), then slide it down (2) and to the right (3) until it is secure.

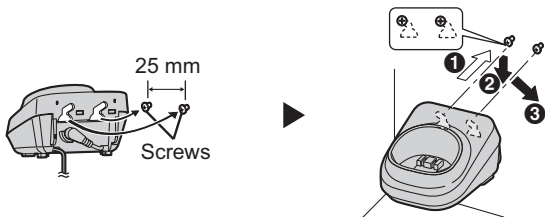

Note:

- Make sure that the wall is strong enough to support the weight of the unit.

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact your phone system dealer.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.

- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
 - It is advised not to use the equipment at a refuelling point. Users are reminded to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress.
-

CAUTION

Installation and relocation

- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
-

Battery

- We recommend using the supplied batteries or additional/replacement batteries noted in the battery information section of the base unit's User Guide on the Panasonic Web site. See page 1 for Panasonic URL. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
 - Do not mix old and new batteries.
 - Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
 - Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
 - Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
 - Only use a compatible charger to charge the batteries. Do not tamper with the charger. Failure to follow these instructions may cause the batteries to swell or explode.
-

General notices

- This equipment will be inoperable when mains power fails.
- When a failure occurs which results in the internal parts becoming accessible, disconnect the power supply cord immediately and return this unit to your phone system dealer.
- To minimise the possibility of lightning damage, when you know that a thunderstorm is coming, we recommend you to unplug the AC adaptor from the AC power outlet.
- No "000" (for Australia), "111" (for New Zealand), and/or other calls can be made from this device during a mains power failure.
- The earpiece on the handset is magnetised and may retain small metallic objects.

Other information

- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

Routine care

- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

Information on Disposal in other Countries outside the European Union



These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

Warranty (for New Zealand)

Panasonic New Zealand undertakes to:

Repair or at its option, replace without cost to the owner, either for material or labour, any part which is found to be defective within two years of the date of purchase.

THIS EXPRESS WARRANTY DOES NOT COVER:

- 1) Pick up and delivery.
- 2) Batteries.
- 3) Repairs when the product has not been used in accordance with the Operating Instructions Manual or has been modified.
- 4) Normal maintenance and cleaning as required in the product's Operating Instructions Manual.
- 5) Service calls to:
 - a Correct the set up of the product
 - b Instruct you how to use the product
 - c Replace fuses or correct your building's wiring
- 6) Damage to the product caused by accident, misuse or Act of God.
- 7) Repairs when the product has been dismantled, repaired, modified or serviced by other than a Panasonic Authorised Dealer authorised to service that type of product.

IF YOUR PANASONIC PRODUCT FAILS WITHIN THE WARRANTY PERIOD:

Take it to the Authorised Panasonic Dealer from whom you purchased the product who will repair it (or arrange to have it repaired) during their normal business hours. All enquiries regarding warranty or otherwise, please call – Customer Support Centre Tel. No.: (09) 272 0178

NOTE: THIS EXPRESS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT YOUR LEGAL RIGHTS.

Panasonic New Zealand Ltd.
350 Te Irirangi Drive
East Tamaki
Private Bag 14911
Panmure
Auckland
NEW ZEALAND
Phone: (09) 272 0100 Fax: (09) 272 0137

Notes



Panasonic Australia Pty. Limited
1 Innovation Road, Macquarie Park NSW 2113, Australia
Customer service number 132600

Panasonic New Zealand Ltd.
350 Te Irirangi Drive, East Tamaki, Private Bag 14911 Panmure,
Auckland, New Zealand

Panasonic System Networks Co., Ltd.
1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2009



TPA50B08

PNQX2642WA DM1109SY4024