

# **How to set up the conference server**

(KX-TGP series)

No. 02-005

March 3 , 2011

Ver.1.0

Panasonic Corporation

## Abstract about this document

This document describes how to set up the conference server to activate the N-way conference feature.

## Revision history

Date	Version	Revision	Firmware version
Mar. 3, 2011	Ver. 1.0	Initial Release	All versions

There are 2 methods to setup conference server setting in TGP.

- 1) with a configuration file
- 2) with web I/F ( administrator access level is required)

# 1) Setting conference server by a configuration file

To activate Network Conference feature, URL/IP address of conference server is required to be configured in "CONFERENCE\_SERVER\_ADDRESS " field in a configuration file.

Once uploading the configuration file with the server information, the feature is ready.

CONFERENCE\_SERVER\_ADDRESS="conference\_server@xxx.net"

Your server URI/address

upload



## 2) Setting Conference server by web I/F

**Panasonic**  
KX-TGP500E01

Status | Network | System | VoIP | **Telephone** | Maintenance

Web Port Close

**Call Control**

**Telephone**

- Multi Number Settings
- Call Control**
- Line 1
- Line 2
- Line 3
- Line 4
- Line 5
- Line 6
- Line 7
- Line 8

Tone Settings  
Import Phonebook  
Export Phonebook

**Call Control**

Send SUBSCRIBE to Voice Mail Server  Yes  No

Conference Server Address **conference\_server@xxx.net**

Inter-digit Timeout 5 seconds

**Emergency Call Phone Numbers**

1.		2.	
3.		4.	
5.			

**Call Rejection Phone Numbers**

1.		2.	
3.		4.	
5.		6.	
7.		8.	
9.		10.	
11.		12.	
13.		14.	
15.		16.	
17.		18.	
19.		20.	
21.		22.	
23.		24.	
25.		26.	
27.		28.	
29.		30.	

Your conference server's URI/address

# Appendix : How to operate conference calls by TGP

## Operation

### Conference calls

Multiple people can establish a conference call.

- 1 During an outside call, press **【MENU】**.
- 2 **▼/▲** : “Conference” → **【SELECT】**.
- 3 Dial the phone number.
  - To correct the number, press {CANCEL} to clear the number and enter again.
- 4 Wait for the paged party to answer.
  - If the paged party does not answer, press **【CANCEL】** 2 times to return to the outside call.
- 5 **【CONF】**
  - If you want to add a new party to the conference, perform from step 1.

Note:

- In step 3, you can dial the phone number from the phonebook:  
**☎** → **▼/▲** : Select the desired entry. → **【CALL】**

For further details, please refer to User Guide of TGP500/550.