

CS Index and CS Name

(KX-UDS/UDT series)

No. 41-014

December 21 , 2012

Ver.1.1

Panasonic Corporation

Abstract about this document

This document describes about CS Index and CS Name.

Revision history

Date	Version	Revision	Firmware version
Aug. 21, 2012	Ver. 1.0	Initial Release	All versions
Dec. 21, 2012	Ver. 1.1	To change the CS Management screen.	UDS124CE: 01.202 or later UDS124 : 01.002 or later

Super Master CS has *several monitor functions for management.
*Refer to “44-003” of technical contents on support site.

Then , CS Index and CS Name are convenient to identify the CS.

Example. CS Monitor

SIP CS KX-UDS124 | Status | Network | System | VoIP | Telephone | Maintenance

Web Logout | Web Port Close

CS Monitor | Tree Image | Monitor Start | Monitor Stop

Stop

CS Monitor

Air Sync Group: 1

Index	RSSI [dBm]	Error Rate [%]	Wired LAN	CS Name MAC Address	Status	Current Sync CS		
						CS Type	CS RPT	CS Index
1	-	-	-	00.80.F0.E9.76.02	INS	-	-	-
2	-37	0	OK	00.80.F0.F0.6C.79	INS	Primary	CS	1
3	-87	0	NG	00.80.F0.E9.76.33	-	-	-	-
4	-87	0	OK	00.80.F0.F0.6C.78	INS	Primary	CS	3

In this situation,

You have to go where the NG CS is and check the LAN connection.

That is, you need to know where the CS whose index is 3 is.


So, we recommend you to prepare a map which indicates where CSs are located.

CS Index


CS Index is assigned to the CS when a CS has been registered.
Before CS registration,
please write down the **MAC address** of CS on the map.
After CS registration,
please add the assigned **number of CS Index** on the map.
It enables you to specify the location of CS easily when you have some troubles.

n Tentative number at **site planning**

Before CS Registration

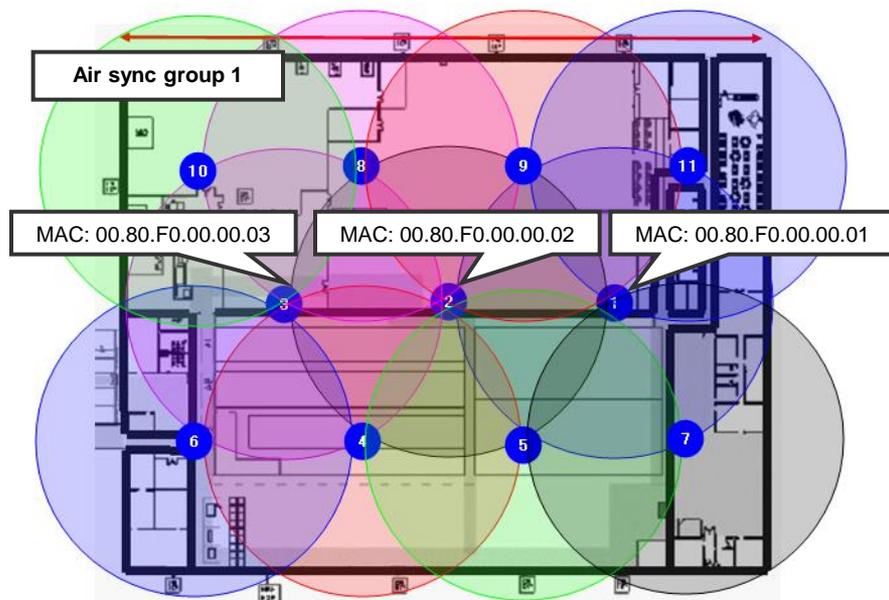

After CS Registration

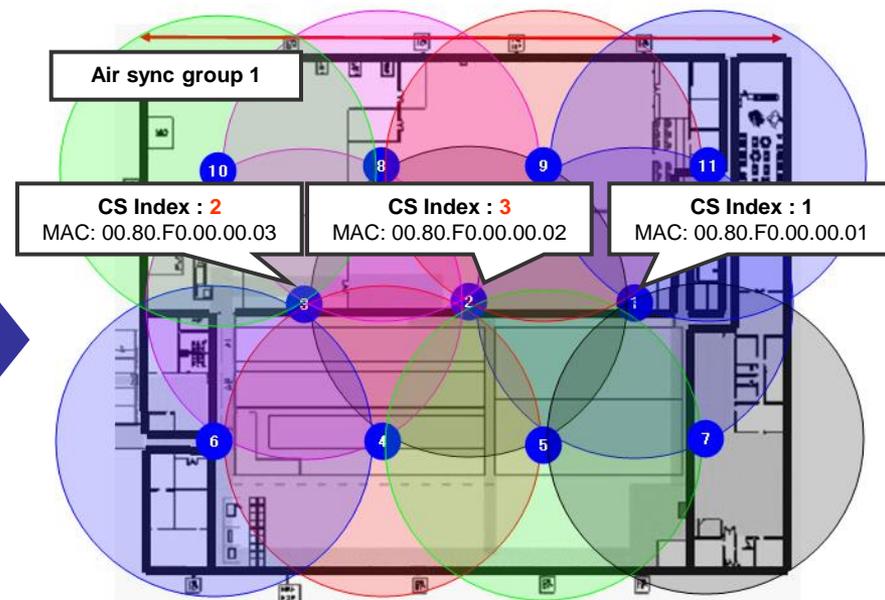

If you want to match the CS index number with the tentative number,
You should register the CS before you place the CS in its planned location.

CS Name also enables you to specify the CS easily.
Please name the CSs freely as you can easily understand.




How to name the CS

At Super Master CS

1. Log in to the Super Master CS.
2. In the [System] tab, select [CS Management].
3. Log in the CS you want to name.

At the target CS

4. In the [System] tab, select [CS Name].
5. Enter the name as you please.
6. Click [Save].
7. Reboot the CS manually while Super Master CS is power-on.

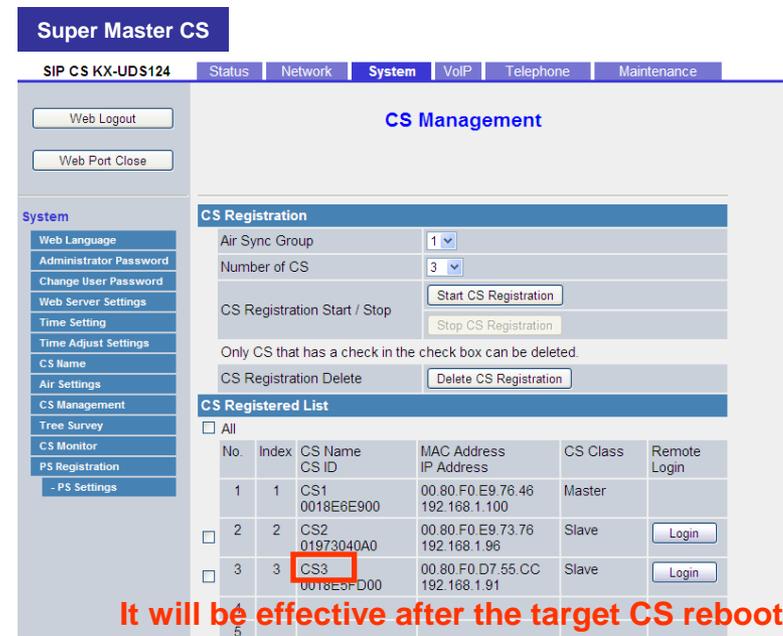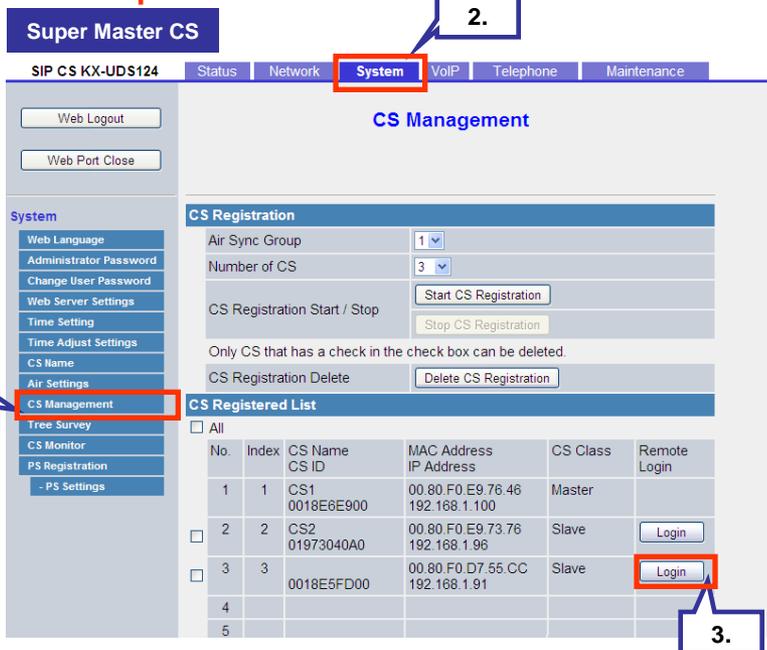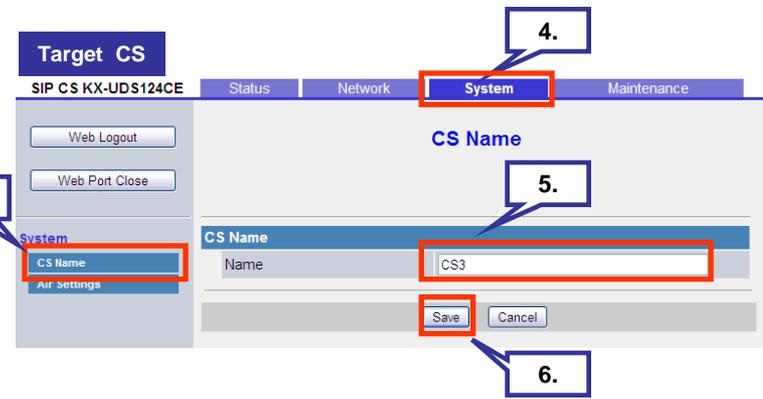

It will be effective after the target CS reboots.