

How to configure SIP account

(KX-UDS/UDT series)

No. 41-009

August 21 , 2012

Ver.1.0

Panasonic Corporation

Abstract about this document

This document describe about how to configure SIP account.

Revision history

Date	Version	Revision	Firmware version
Aug. 21, 2012	Ver. 1.0	Initial Release	All versions

Procedure

<Step1> Confirm IP address of Super Master CS




<Step2> Open the CS Web port




<Step3> Configure the SIP account for each Handset

<Step1> How to confirm IP Address of Super Master CS

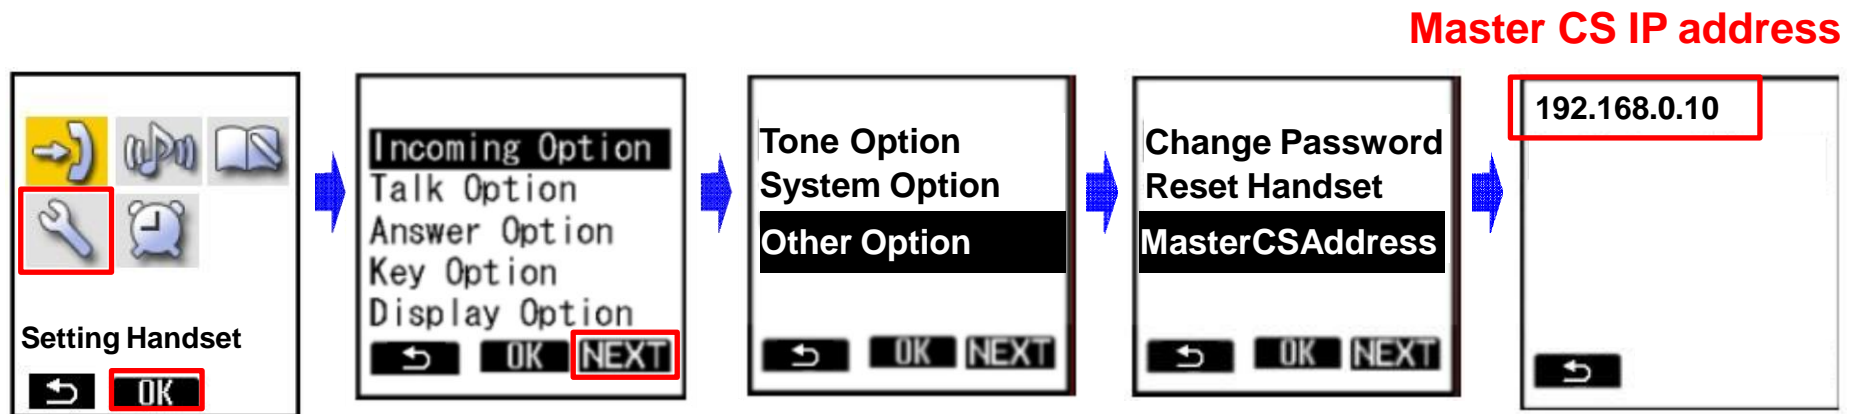

1. Turn on the PS.
2. Press [Menu] or the [CENTER] navigation key.
3. Select **"Setting Handset"** and then press [OK].
4. Press [NEXT].
5. Select **"Other Option"** and then press [OK].
6. Select **"MasterCSAddress"** and the press [OK].
 - Display the Master CS IP address.

<Step2> How to Open the CS Web port

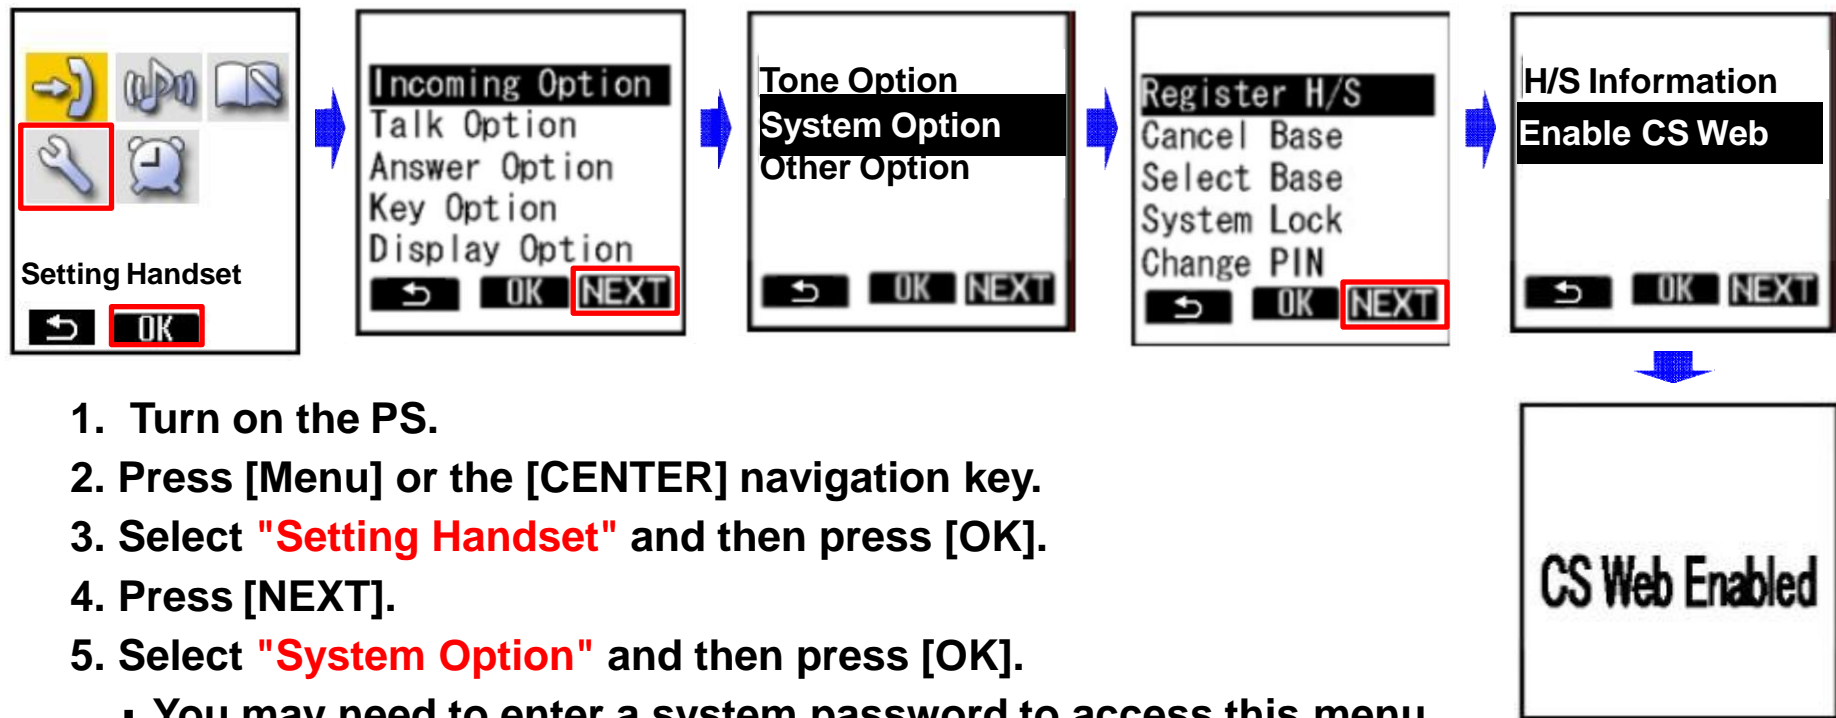

1. Turn on the PS.
2. Press [Menu] or the [CENTER] navigation key.
3. Select **"Setting Handset"** and then press [OK].
4. Press [NEXT].
5. Select **"System Option"** and then press [OK].
 - You may need to enter a system password to access this menu.
6. Press [NEXT] to display the second screen, select **"Enable CS Web"**, and then press [OK].
7. When the operation is complete, "CS Web Enabled" is displayed.

<Step3> Configure the SIP account for each Handset

PS Registration

No.	PS Name	Select Button	Phone Number	Wireless Status
1	UDT111	Line1 SIP Setting Line2 SIP Setting		Un Registered
2	UDT121	Line1 SIP Setting Line2 SIP Setting		Un Registered
3		Line1 SIP Setting Line2 SIP Setting		Un Registered

SIP Settings - PS [Line 1]

PS Name: UDT111

Phone Number: 1011

SIP URI:

SIP Authentication

Authentication ID: 123456789

Authentication Password:

SIP Source Port

Source Port: 5061 [1024-49151]

ID and Password for administrator
 ID : admin
 Password : adminpass

1. Log in to the Super Master CS.
2. In the [System] tab, select [PS Registration]. [System] → [PS Registration]
3. Enter an extension name in PS Name and Click [All Save].
4. Press [Line1 SIP Setting] or [Line2 SIP Setting].
5. Enter the “Phone Number”.
 (Enter “Authentication ID” and “Authentication Password” If necessary.)
6. Click [All Save] and click [Back].
7. Repeat 2 to 5 for each PS.