

How to delete PS Registration

(KX-UDS/UDT series)

No. 41-008

August 21 , 2012

Ver.1.0

Panasonic Corporation

Abstract about this document

This document describe about how to delete PS Registration.

Revision history

Date	Version	Revision	Firmware version
Aug 21, 2012	Ver. 1.0	Initial Release	All versions

Procedure

<Step1> Confirm IP address of Super Master CS



<Step2> Open the CS Web port




<Step3> Delete PS Registration




<Step4> Confirm the result

<Step1> How to confirm IP Address of Super Master CS

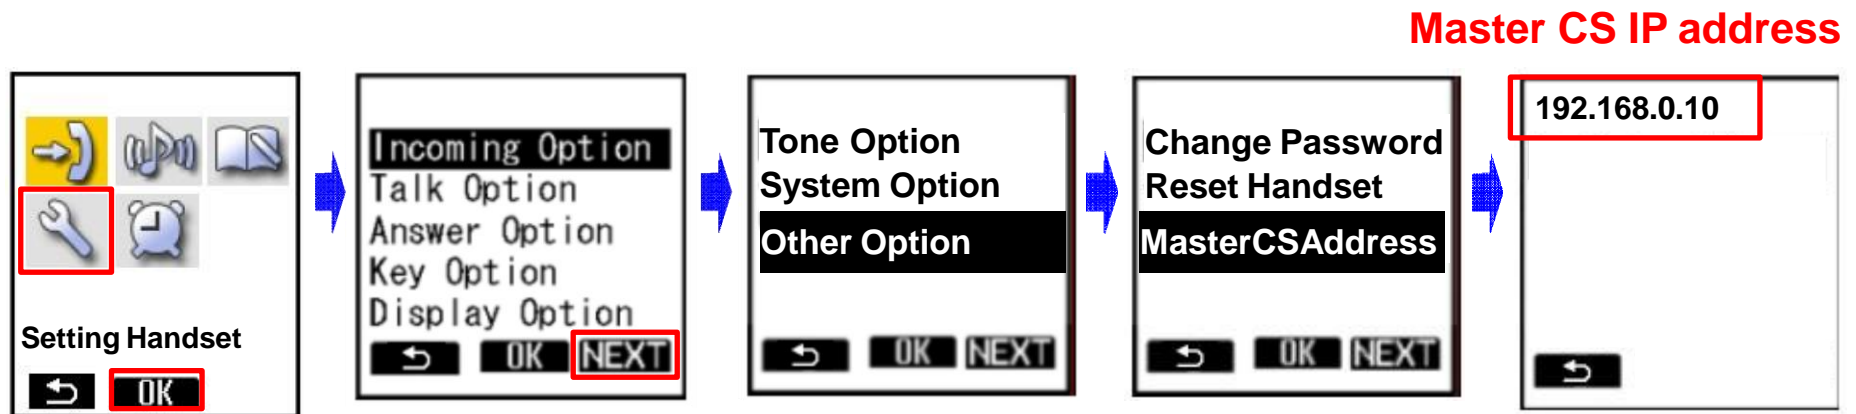

1. Turn on the PS.
2. Press [Menu] or the [CENTER] navigation key.
3. Select **"Setting Handset"** and then press [OK].
4. Press [NEXT].
5. Select **"Other Option"** and then press [OK].
6. Select **"MasterCSAddress"** and the press [OK].
 - Display the Master CS IP address.

<Step2> How to Open the CS Web port

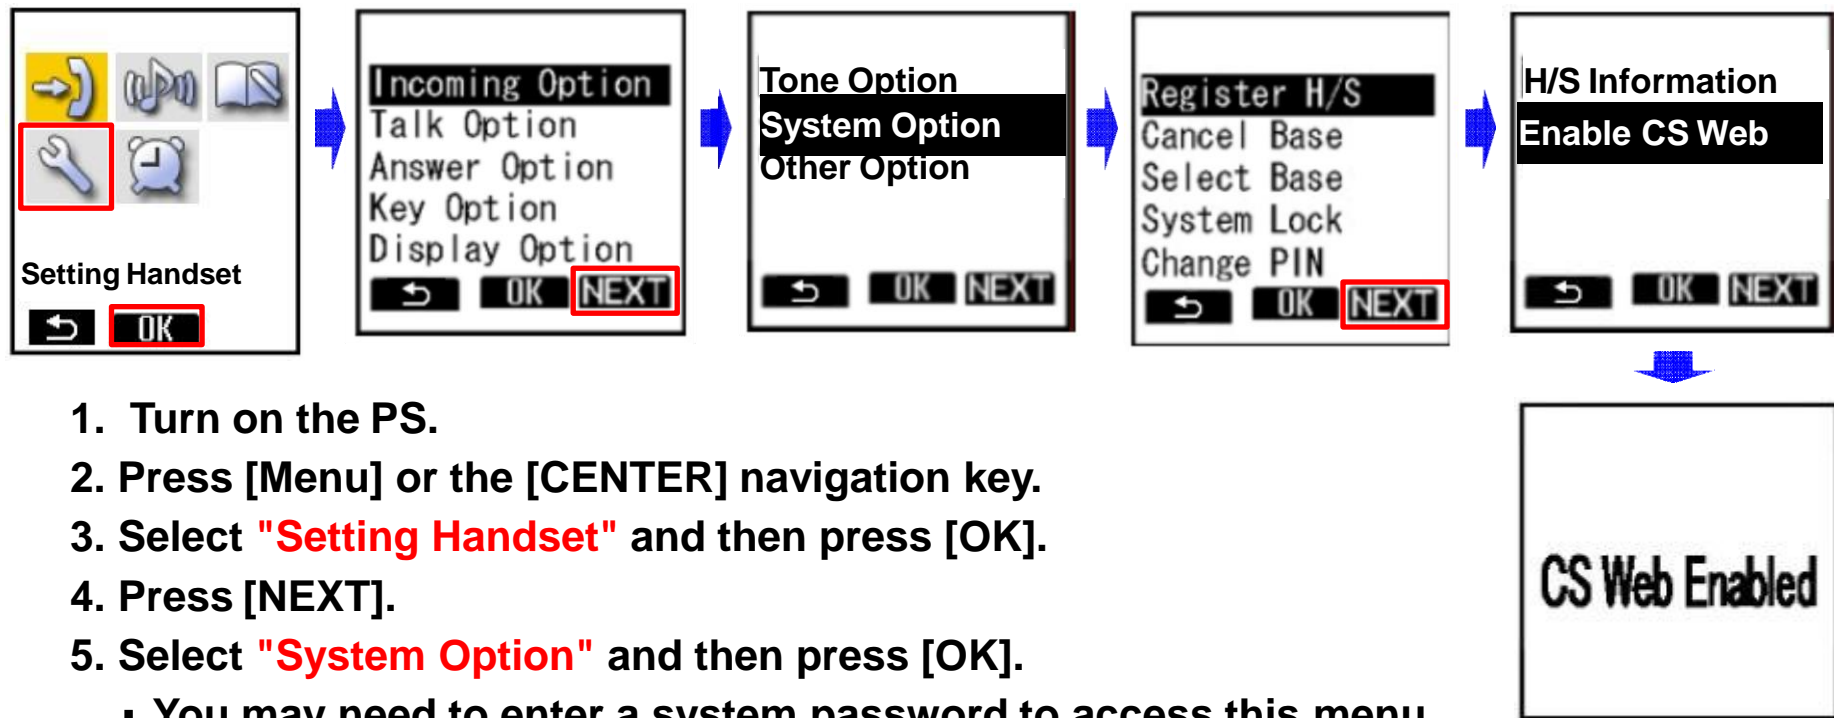

1. Turn on the PS.
2. Press [Menu] or the [CENTER] navigation key.
3. Select **"Setting Handset"** and then press [OK].
4. Press [NEXT].
5. Select **"System Option"** and then press [OK].
 - You may need to enter a system password to access this menu.
6. Press [NEXT] to display the second screen, select **"Enable CS Web"**, and then press [OK].
7. When the operation is complete, "CS Web Enabled" is displayed.

<Step3> How to delete PS Registration

The screenshots illustrate the following steps:

- Step 2:** The 'System' tab is selected, and 'PS Registration' is chosen from the left-hand menu.
- Step 3:** The 'Delete PS Registration' button is highlighted in the 'PS Registration Delete' section.
- Step 4:** The 'PS Lists' dialog shows 'Available PS' with items 1, 2, and 3. The right arrow '>' is clicked to move item 1 to the 'Selected PS' list.
- Step 5:** The 'Next' button is clicked to proceed to the next screen.
- Step 6:** A confirmation dialog asks 'Do you want to delete the selected PS?' with 'OK' and 'Cancel' buttons.

1. Log in to the Super Master CS.

ID and Password for administrator
 ID : admin
 Password : adminpass

2. In the [System] tab, select [PS Registration]. **[System] → [PS Registration]**

3. Click [Delete PS Registration].

4. Select the PS in “Available PS”, and then click [>].

Or click [>>] to select all available PSs. (To deselect PS(s), click [<] or [<<].)

5. Click [Next].

6. Click [OK].

<Step4> Confirm the result

Panasonic Delete all PSs

SIP CS KX-UDS124CE | Status | Network | System | VoIP | Telephone | Maintenance

Web Logout | Web Port Close | **PS Delete Complete** 1.

PS Registration

Please push the "Stop PS Registration" button to stop on the way after starting PS Registration.

PS Registration | Start PS Registration | Stop PS Registration

Please push the "Delete PS Registration" to delete registered PS.

PS Registration Delete | Delete PS Registration

No.	PS Name	Select Button	Phone Number	Wireless Status
1	UDT111	Line1 SIP Setting		Un Registered
2	UDT121	Line1 SIP Setting		Un Registered
3	UDT121_2	Line1 SIP Setting		Un Registered

1.

Panasonic Delete one PS

SIP CS KX-UDS124CE | Status | Network | System | VoIP | Telephone | Maintenance

Web Logout | Web Port Close | **PS Delete Complete** 1.

PS Registration

Please push the "Stop PS Registration" button to stop on the way after starting PS Registration.

PS Registration | Start PS Registration | Stop PS Registration

Please push the "Delete PS Registration" to delete registered PS.

PS Registration Delete | Delete PS Registration

No.	PS Name	Select Button	Phone Number	Wireless Status
1	UDT111	Line1 SIP Setting		Registered
2	UDT121	Line1 SIP Setting		Registered
3	UDT121_2	Line1 SIP Setting		Un Registered

1.

1. Confirm that **"PS Delete Complete"** and **"Un Registered"** in Wireless status are displayed.
2. Confirm that standby screen changes as below.

