

How to set provisioning server address to all CSs

(KX-UDS/UDT series)

No. 42-003

September 28 , 2012

Ver.1.0

Panasonic Corporation

Abstract about this document

This document describes about how to set provisioning server address to “all” CSs.

Revision history

Date	Version	Revision	Firmware version
Sep 28, 2012	Ver. 1.0	Initial Release	All versions

Overview


When you operate the UDS system with **PROVISION_SUPERMASTER_ONLY="N (Default)"**, All CSs try to access the provisioning server directly.

In addition , Super Master CS does not distribute the configuration file to other CSs.


So, **all CSs must know provisioning server address (file path)** in order to get configuration file by itself.

There are **3 methods** to set file path to **all CSs**.

You need to do one of them. Please follow the flowchart in next page.

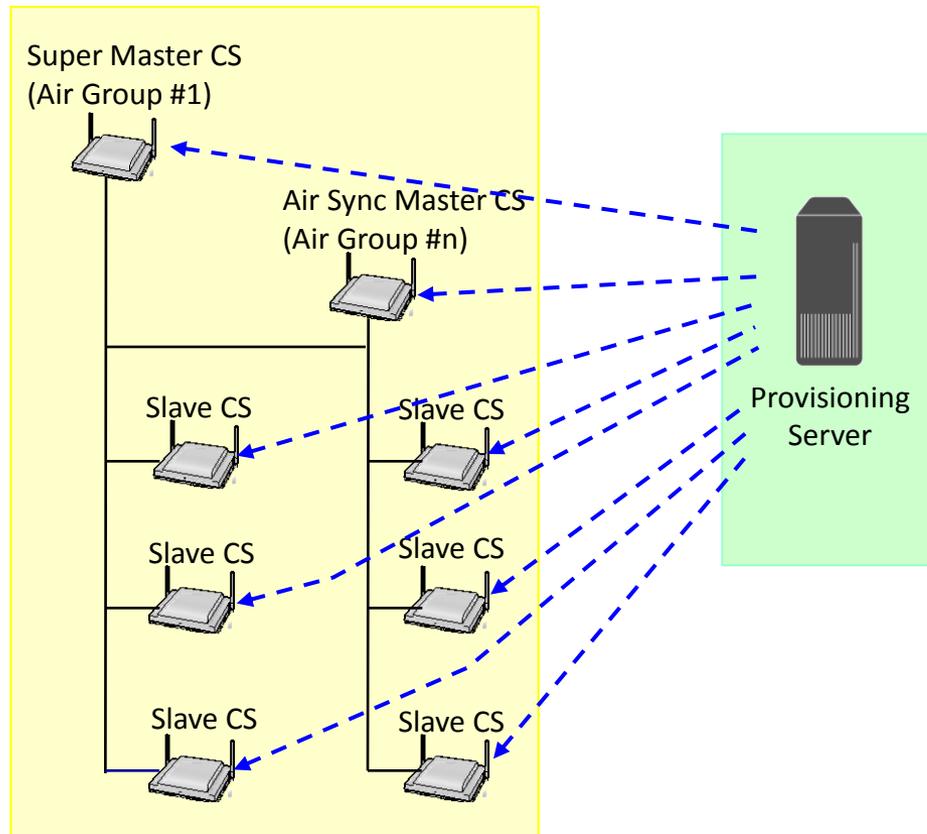

Flowchart for selecting “Method”

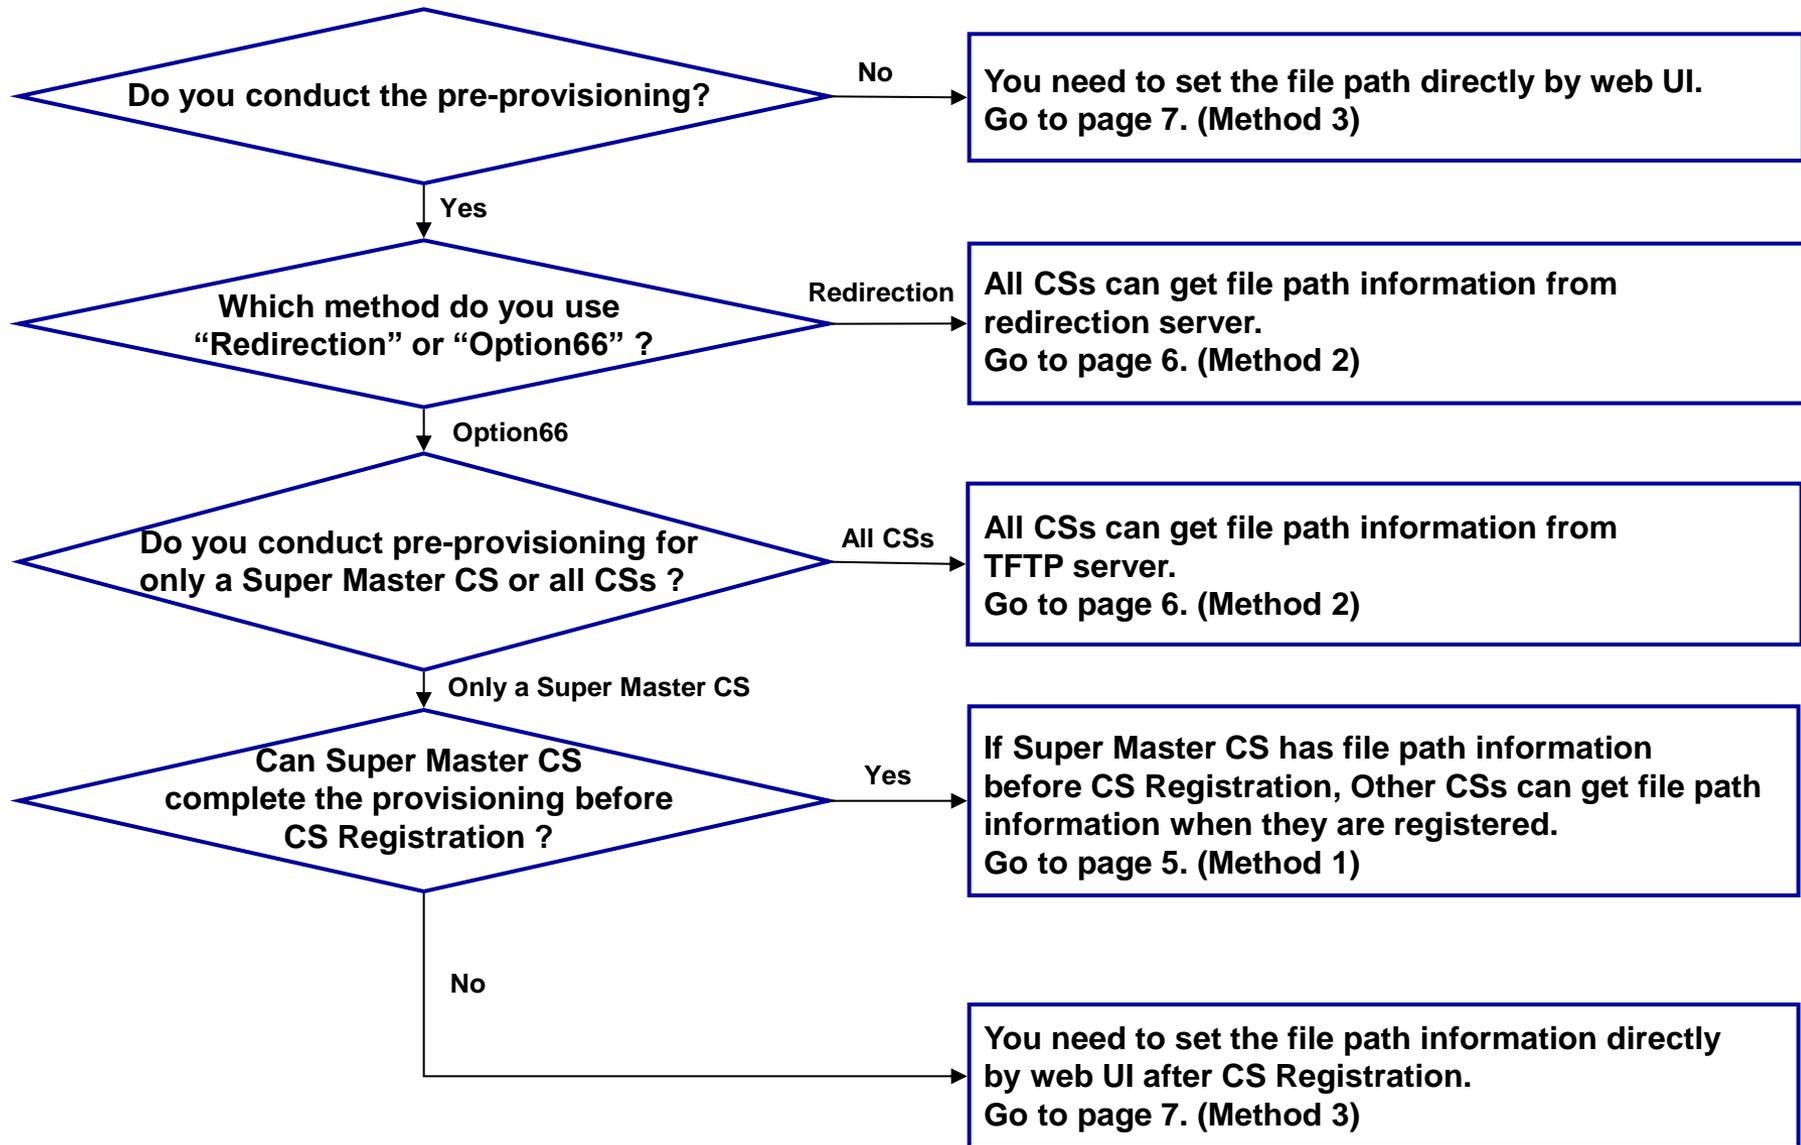

How to set file path ①

Method ①

1. Prepare the configuration file which includes file path **on provisioning server**.
2. Complete the provisioning for super master CS **before CS registration**.
3. Confirm if provisioning has completed. (Refer to the bottom of this page.)
4. Conduct CS registration.
5. After CS registration, file path will be set to all registered CSs.

Configuration file example (for provisioning)

```
# Panasonic SIP Phone Standard Format File # DO NOT CHANGE THIS LINE!  
  
## PS name  
PROFILE_NAME_PS1="PS 01"  
PROFILE_NAME_PS1="PS 02"  
...  
## Provisioning Settings  
CFG_SYSTEM_FILE_PATH="tftp://prov.example.com/Panasonic/KX-UDS124.cfg"  
CFG_MASTER_FILE_PATH="tftp://prov.example.com/Panasonic/UserAccount.cfg"  
...
```

**By checking the some parameters from web UI,
You can confirm if provisioning has completed .**

Before provisioning (example)

PS Name / Number				
No.	PS Name	Select Button	Phone Number	Wireless Status
1		Line1 SIP Setting		Un Registered
		Line2 SIP Setting		
2		Line1 SIP Setting		Un Registered
		Line2 SIP Setting		



After provisioning (example)

PS Name / Number				
No.	PS Name	Select Button	Phone Number	Wireless Status
1	PS 01	Line1 SIP Setting	2001	Un Registered
		Line2 SIP Setting		
2	PS 02	Line1 SIP Setting	2002	Un Registered
		Line2 SIP Setting		

Method ②

1. Conduct pre-provisioning to **all CSs**.
2. When a CS has completed pre-provisioning, a CS gets information of file path (CFG_XXX_FILE_PATH).

In case that you use the redirection server for pre-provisioning, this condition is met automatically.

Configuration file example (for pre-provisioning)

```
# Panasonic SIP Phone Standard Format File # DO NOT CHANGE THIS LINE!  
  
## Pre Provisioning Settings  
OPTION66_ENABLE="Y"  
OPTION66_REBOOT="Y"  
PROVISION_ENABLE="Y"  
  
## Provisioning Settings  
CFG_SYSTEM_FILE_PATH="ftp://prov.example.com/Panasonic/KX-UDS124.cfg"  
CFG_MASTER_FILE_PATH="ftp://prov.example.com/Panasonic/UserAccount.cfg"
```

How to set file path ③

Method ③

1. Log in to the Super Master CS.
2. In the [Maintenance] tab, select [Provisioning Maintenance].
3. Enter the file path and click “All Save”.
4. File path will be set to all registered CS.

Note:

Once you enter the file path by this method, you will be **less** able to configure the file path by using configuration file.

The screenshot displays the Panasonic SIP CS KX-UDS124CE web interface. The top navigation bar includes tabs for Status, Network, System, VoIP, Telephone, and Maintenance. The Maintenance tab is active. On the left sidebar, under the Maintenance section, 'Provisioning Maintenance' is selected. The main content area shows the 'Provisioning Maintenance' configuration page with the following fields:

Enable Provisioning	<input checked="" type="radio"/> Yes <input type="radio"/> No
Standard File URL	<input type="text"/>
Product File URL	<input type="text"/>
Master File URL	http://prov.example.com/Panasonic/Use
System File URL	http://prov.example.com/Panasonic/KX-
Cyclic Auto Resync	<input checked="" type="radio"/> Yes <input type="radio"/> No
Resync Interval	<input type="text"/> minute(s) [1-40320]
Header Value for Resync Event	check-sync

At the bottom of the page, there are 'All Save' and 'Cancel' buttons. Callout boxes with numbers 2 and 3 point to the Maintenance tab, the Provisioning Maintenance menu item, and the file path fields respectively.