

Reset functions

(KX-UDS series)

No. 44-001

January 25 , 2013

Ver.1.1

Panasonic Corporation


Abstract about this document

This document describes about Reset functions.

Revision history

Date	Version	Revision	Firmware version
Aug 21, 2012	Ver. 1.0	Initial Release	All versions
Jan 25, 2013	Ver. 1.1	Revised page 3	All versions

How to reset UDS to Factory Default

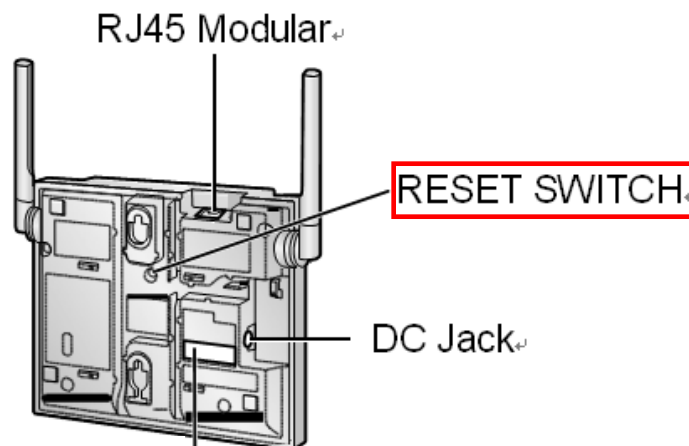

1. Turn on CS (KX-UDS)
2. Press and hold the RESET switch for more than 15 seconds.
3. CS reboots automatically after about 1 minute.
4. Confirm LED is red blinking after it becomes green.
5. Turn off CS.

Notice

- To avoid problems, it is recommended that you save your settings beforehand.
- This type of initialization also deletes all other data on the CS, such as the call logs, the phonebook and configuration data etc.