

How to set up the conference server

(KX-UT1xx series/248)

No. 12-005

May 25 , 2012

Ver.1.1

Panasonic Corporation

Abstract about this document

This document describes how to set up the conference server to activate the N-way conference feature.

Revision history

Date	Version	Revision	Firmware version
Jun. 22, 2011	Ver. 1.0	Initial Release	All versions
May 25, 2012	Ver. 1.1	Add description about UT248	All versions


There are 2 methods to setup conference server setting in UT1xx/248.

- 1) with a configuration file
- 2) with web I/F (administrator access level is required)

1) Setting conference server by a configuration file

To activate Network Conference feature, URL/IP address of conference server is required to be configured in "CONFERENCE_SERVER_URI " field in a configuration file.

Once uploading the configuration file with the server information, the feature is ready.

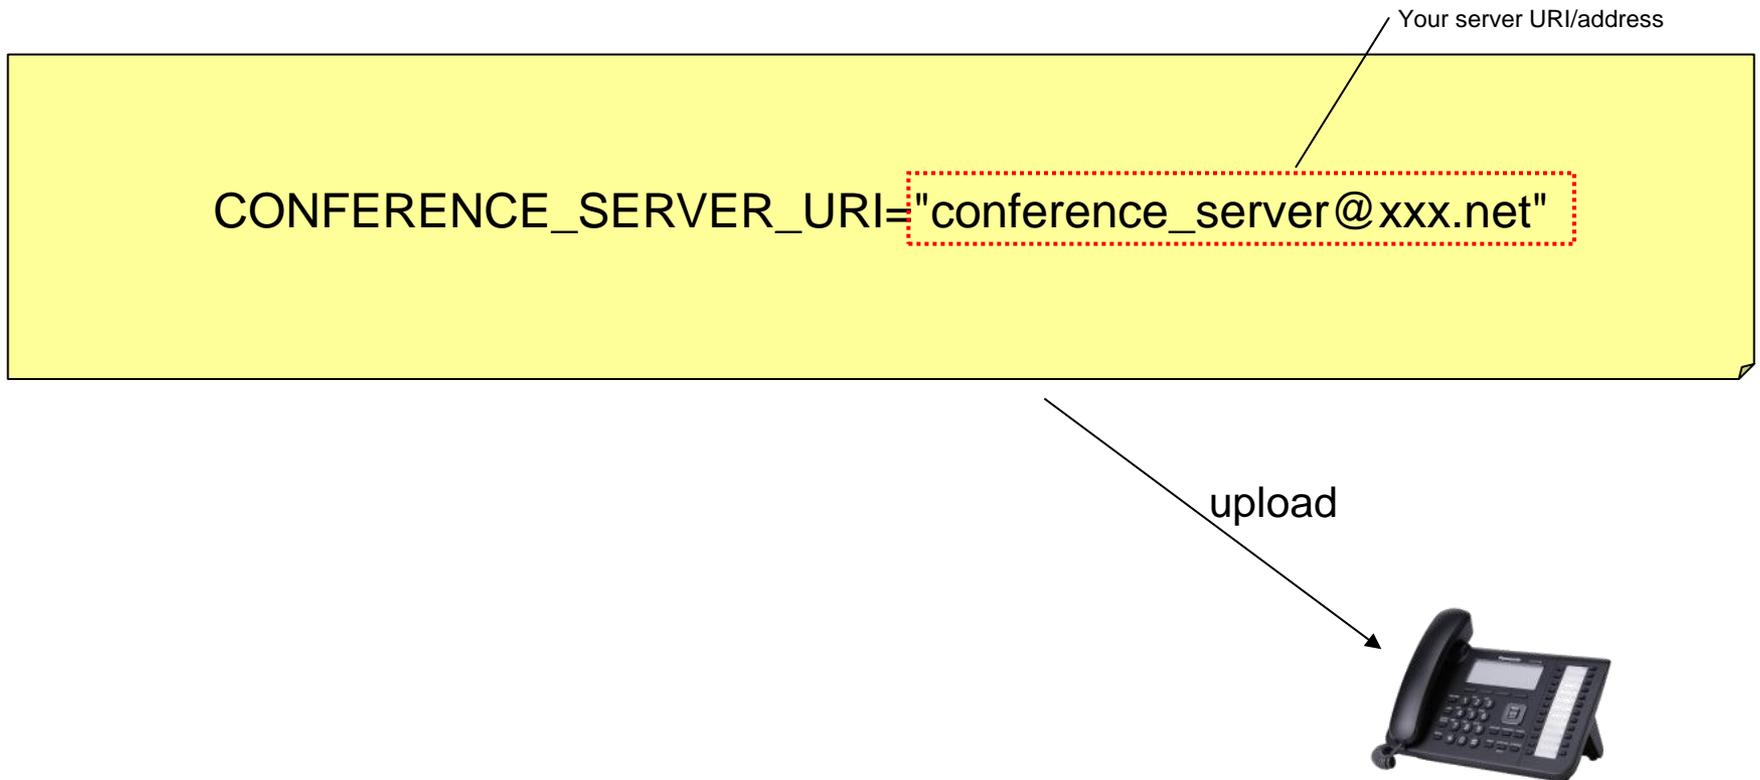

2) Setting Conference server by web I/F

Panasonic

KX-UT136

Status Network System VoIP **Telephone** Maintenance

Web Port Close

Call Control

Telephone

- Call Control
 - Line 1
 - Line 2
 - Line 3
 - Line 4
- Flexible Button Settings
- Tone Settings
- Telephone Settings
- Import Phonebook
- Export Phonebook

Call Control

Send SUBSCRIBE to Voice Mail Server Yes No

Conference Server URI

Inter-digit Timeout 5 seconds

Timer for Dial Plan 5 seconds

International Call Prefix

Country Calling Code

National Access Code

Default Line for Outgoing 1

Flash/Recall Button Terminate Flash Hook

Flash Hook Event Signal flashhook

Directed Call Pickup

Call Rejection Phone Numbers

1.	<input type="text"/>	2.	<input type="text"/>
3.	<input type="text"/>	4.	<input type="text"/>
5.	<input type="text"/>	6.	<input type="text"/>
7.	<input type="text"/>	8.	<input type="text"/>
9.	<input type="text"/>	10.	<input type="text"/>
11.	<input type="text"/>	12.	<input type="text"/>
13.	<input type="text"/>	14.	<input type="text"/>

Your conference server's URI/address

Appendix : How to operate conference calls by UT1xx/248

Operation

Conference calls

Multiple people can establish a conference call.

1. While talking, press **[CONFERENCE/CONF/△]** .
2. Dial the another phone number.
- 3 When answer the phone, press **[CONFERENCE/CONF/△]** .
 - If the paged party does not answer, press **[CANCEL]** to return.
 - If you want to add a new party to the conference, perform from step 1.

Note:

- In step 3, you can dial the phone number from the phonebook:
[📖] → **[▼]/[▲]** : Select the desired entry. → **[CALL]**

For further details, please refer to Operating Instructions of UT1xx/248.