

How to update F/W via WEB in LAN

(KX-UT1xx series/248)

No. 12-001

May 25 , 2012

Ver.1.1

Panasonic Corporation

Abstract about this document

This document describe about how to update F/W via WEB in LAN.

Revision history

Date	Version	Revision	Firmware version
Jun. 22, 2011	Ver. 1.0	Initial Release	All versions
May 25, 2012	Ver. 1.1	Add description about UT248	All versions

1. Connect to Web UI

1-1. Connect the Phone and a PC to the network

1-2. Check the IP address of the phone.

[Setting]->[Information Display]->[IP Address]

1-3. Enable the phone's Web UI

[Setting]->[Network Setting]->[Embedded Web]->[On]->[Enter]

1-4. Enter the IP address in a PC's Web Browser.

example: Enter "http://192.168.1.68" in the address bar of Internet Explorer

1-5. Enter Authentication ID and password

ID:admin

Password:adminpass

1-6. Now you can upload new Firmware into the phone using Web browser.

Note: The phone's http server port will be closed after idle time of 30 minutes.
In such case, please repeat the same procedure to re-open the http port.

2. Update Firmware

- 2-1. Move to [Maintenance] -> [Local Firmware Update] menu.
- 2-2. Check [Encryption] – “Yes”
- 2-3. Select Firmware file of unit. (example: UT1xx_SW***.fw)
- 2-4. Click [Update Firmware]
- 2-5. Please wait for about 1 minute.

The unit will reboot automatically after successfully update.

You can check that STATUS LED turn off for a few seconds or LCD indication when unit reboots.

Panasonic
KX-UT136

Status | Network | System | VoIP | Telephone | **Maintenance**

Local Firmware Update

Web Port Close

Maintenance

- Firmware Maintenance
- Local Firmware Update**
- Provisioning Maintenance
- Management Server
- Reset to Defaults
- Restart

Local Firmware Update

Encryption Yes No

File Name 参照...

Update Firmware

Step 2-1 (Maintenance menu)

Step 2-1 (Local Firmware Update menu)

Step 2-2 (Encryption Yes)

Step 2-3 (File Name field)

Step 2-4 (Update Firmware button)