

TCP Connection behind NAT Router

(KX-UT1xx series/248)

No. 12-015

May 25 , 2012

Ver.1.1

Panasonic Corporation

Abstract about this document

This document describe about setting of TCP connection behind NAT router.

Revision history

Date	Version	Revision	Firmware version
Jun. 22, 2011	Ver. 1.0	Initial Release	All versions
May 25, 2012	Ver. 1.1	Add description about UT248	All versions

Outline

If you use phone using TCP located behind NAT router, it may required to open port of NAT router for port forwarding otherwise sometimes SIP communication cannot be established.

NAT Router settings

Step1: NAT router settings


UT1xx settings

Step2: UT1xx/248 Settings (Static global IP address)

- Setting Static global address on Web user interface of UT1xx/248.

Step3: UT1xx/248 Settings (Port number)


- Setting Port number on Web user interface of UT1xx/248

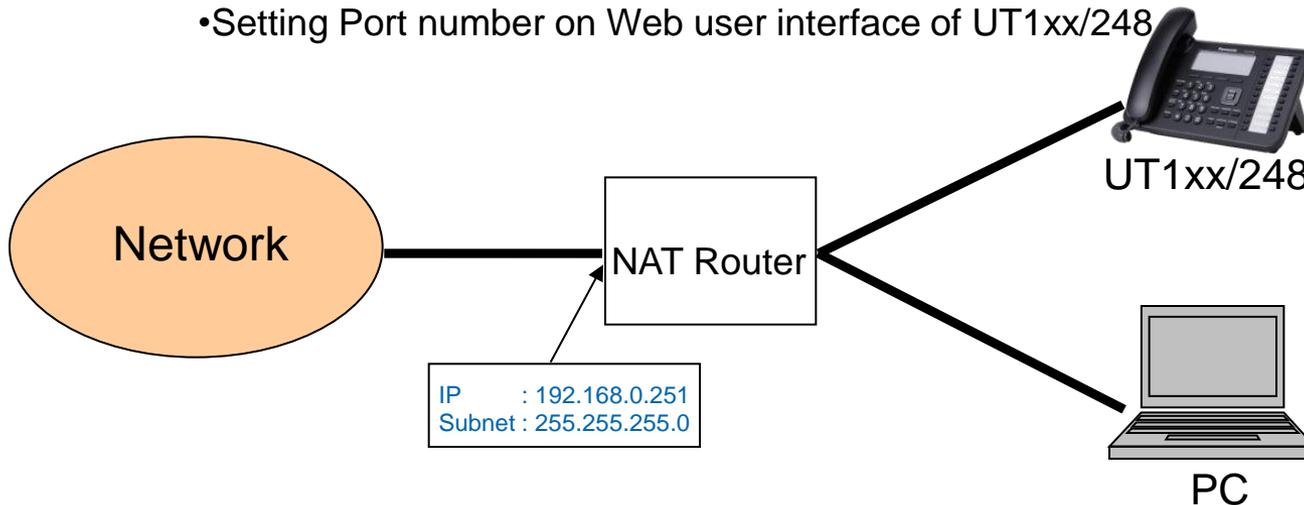

* IP Address and Subnet mask is example.

Step1 NAT Router settings

1. Activate IP Masquerade function of NAT Router
2. Check the global address of NAT Router
3. Open Port of NAT Router connected with network side

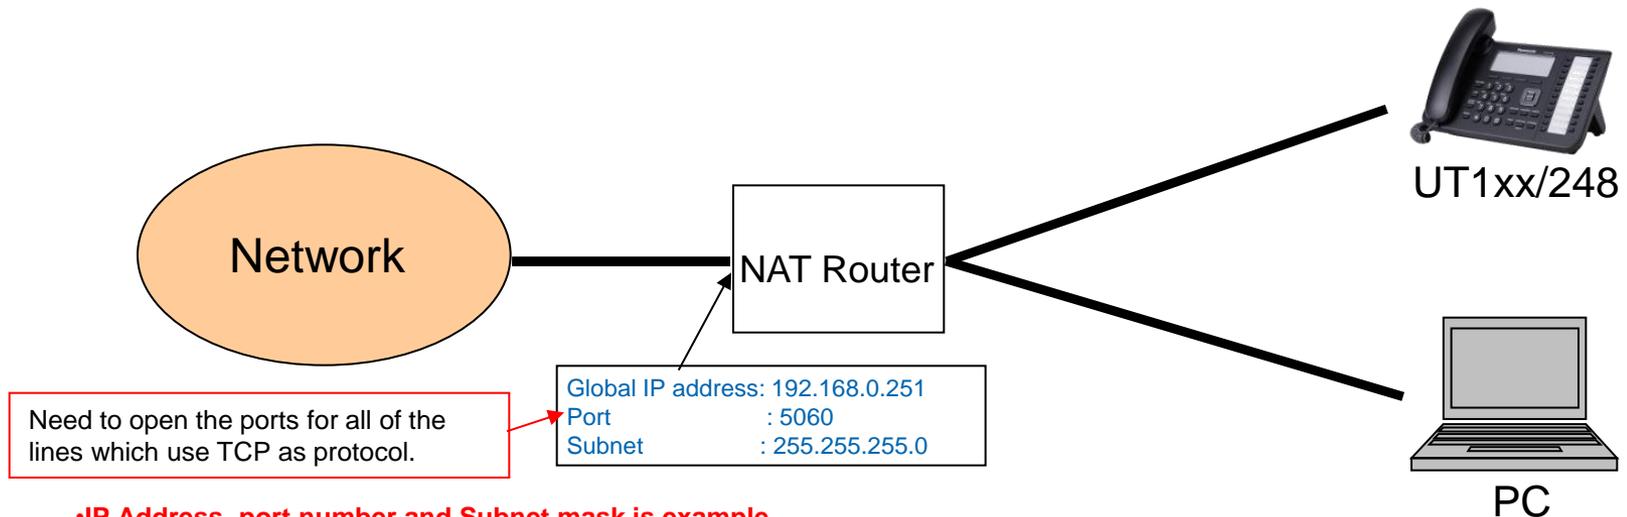

- IP Address, port number and Subnet mask is example.
- Also, please refer manual of router for how to open port of NAT router.

Step2 UT1xx/248 settings (Setting Static global address)

Setting Static global address on Web user interface

Panasonic
KX-UT136

Status **Network** System VoIP Telephone Maintenance

Web Port Close

Network

- Basic Network Settings
- Ethernet Port Settings
- HTTP Client Settings
- Global Address Detection
- Static NAPT Settings**

Static NAPT Settings

Global IP Address

Global IP Address 4. 192.168.0.251 | [Null: Disable]

Even if you enter a value for this setting, if "Global Address Detection" is enabled, the detected global IP address will be used.

Enable Global IP Address Usage per Line

Line 1 5. Yes No

Line 2 Yes No

Line 3 Yes No

Line 4 Yes No

External RTP Port

Channel 1-25

0	0	0	0	0
0	0	0	0	0
0	0	0	0	0
0	0	0	0	0
0	0	0	0	0

[1024-49150: Even Number Only, 0: Disable]

Set a value for all fields, or set all fields to 0 (disable).

6. Save Cancel

UT248 Line1-6

1. Open Web user interface.
2. Login administrator account.
3. Click [Network] – [static NAPT Settings].
4. Enter “Global IP Address” checked at Step1-2.
5. Select “Yes” to “Enable Global IP Address Usage per Line”, you want to use Lines as TCP connection.
6. Click [Save].

Step3 UT1xx/248 settings (Setting Port number)

Setting Port number on Web user interface

The screenshot shows the Panasonic KX-UT136 web interface. The 'VoIP' tab is selected, and the 'SIP Source Port' field is set to 5060. The 'Save' button is highlighted. The interface includes a navigation menu on the left with 'SIP Settings' and '- Line 1' selected. The main content area is divided into several sections: SIP Source Port, SIP Authentication, DNS, Transport Protocol for SIP, Timer Settings, Quality of Service (QoS), SIP extensions, NAT Identity, and Security. The 'SIP Source Port' field is highlighted with a red box and labeled '3.'. The 'Save' button is highlighted with a red box and labeled '4.'. The 'VoIP' tab is labeled '1.' and the '- Line 1' menu item is labeled '2.'.

1. Click [VoIP].
2. Click [-Line *] selected “Yes” at Step2-5 of previous page.
3. Enter Port number opened at Step1-3 to “SIP Source Port”.
4. Click [Save].

THE SETTING WAS COMPLETED!

Access the Web user interface

1. Confirm the IP address of KX-UT1xx/248.

1-1 : [Setting] or [Setup] (Left soft key) → select [Information Display]
→ [Enter] → [Down] (joystick)

1-2 : Confirm the IP address displayed on LCD.

2. Embedded Web.

2-1 : [Setting] or [Setup] (Left soft key) → select [Network setting]
→ [Enter] → select [Embedded web] → [Enter] → select [On] → [Enter]

3. Access the Web user interface.

3-1 : Open your Web browser.

3-2 : Enter your KX-UT1xx/248 URL to Web browser
(<http://your KX-UT1xx/248 IP address>) .

3-3 : Enter user name (**admin**) and password (**adminpass**) and click “OK”.

3-4 : The Web user interface window is displayed.

Configure the settings for the unit as desired.