

# **Parameter that controls “From” Header , when making anonymous call**

(KX-UT1xx series/248)

No. 16-001

May 25 , 2012

Ver.1.1

Panasonic Corporation

## Abstract about this document

This document describe about Parameter that controls “From” Header , when making anonymous call in UT1xx/248.

## Revision history

Date	Version	Revision	Firmware version
Mar. 23, 2012	Ver. 1.0	Initial Release	All versions
May 25, 2012	Ver. 1.1	Add description about UT248	All versions

# Outline

1. Parameter that controls “From” Header
  - 1.1 Three kind of parameter
  - 1.2 The place where parameter controls
  
2. Composition of “From” Header in each settings
  
  
3. Example of setting

# 1. Parameter that controls "From" Header


## 1.1 Three kind of parameter

- The composition of "From" Header can be controlled by three parameters of Configuration File.

	Parameter	Description
1	SIP_ANM_DISPNAME_[1-6]	Specifies the text string to set as the display name in the "From" header
2	SIP_ANM_USERNAME_[1-6]	Specifies the text string to set as the user name in the "From" header
3	SIP_ANM_HOSTNAME_[1-6]	Specifies whether to set an anonymous host name in the "From" header

\* Line5, 6 : UT248 only

## 1.2 The place where parameter controls

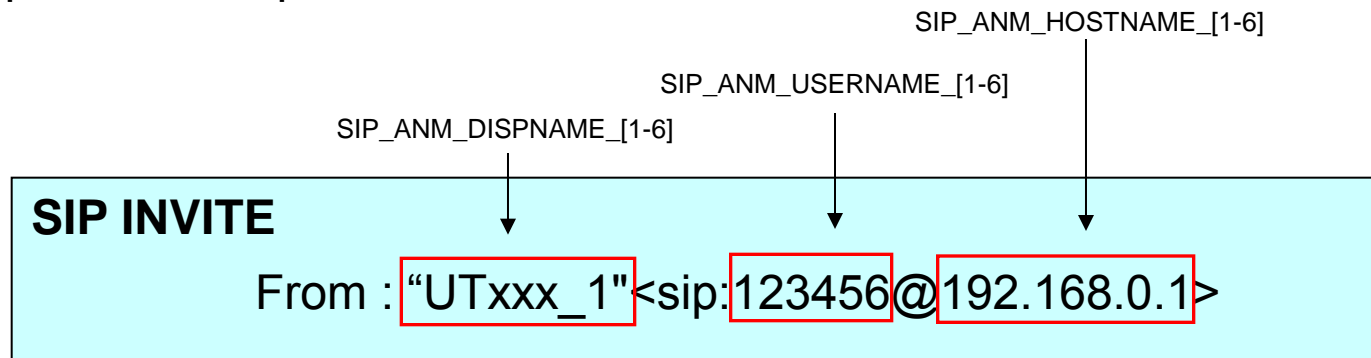

\*Line5, 6 : Only available UT248.

## 2. Composition of “From” Header in each settings

Parameter				Invite From Header
SIP_ANM_DISPNAME	SIP_ANM_USERNAME	SIP_ANM_HOSTNAME		
0: Use normal display name 1: Use “Anonymous” for display name 2: Do not send a display name	0: Use normal user name 1: Use “Anonymous” for user name 2: Do not send a user name	Y: Use “anonymous.invalid” for host name N: Use normal host name		
0	0	Y		“UTxxx_1” <sip:123456@anonymous.invalid>
0	1	Y		“UTxxx_1” sip:anonymous@anonymous.invalid>
0	2	Y		“UTxxx_1” <sip:anonymous.invalid>
0	0	N		“UTxxx_1” <sip:123456@192.168.0.1>
0	1	N		“UTxxx_1” <sip:anonymous@192.168.0.1>
0	2	N		“UTxxx_1” <sip:192.168.0.1>
1	0	Y		“Anonymous” <sip:123456@anonymous.invalid>
1	1	Y		“Anonymous” <sip:anonymous@anonymous.invalid>
1	2	Y		“Anonymous” <sip:anonymous.invalid>
1	0	N		“Anonymous” <sip:123456@192.168.0.1>
1	1	N		“Anonymous” <sip:anonymous@192.168.0.1>
1	2	N		“Anonymous” <sip:192.168.0.1>
2	0	Y		<sip:123456@anonymous.invalid>
2	1	Y		<sip:anonymous@anonymous.invalid>
2	2	Y		<sip:anonymous.invalid>
2	0	N		<sip:123456@192.168.0.1>
2	1	N		<sip:anonymous@192.168.0.1>
2	2	N		<sip:192.168.0.1>

### 3. Example of setting

Configuration File (default)

```
SIP_ANM_DISPNAME_1="1"  
SIP_ANM_USERNAME_1="0"  
SIP_ANM_HOSTNAME_1="N"
```



Making anonymous call

From : "Anonymous" <sip:123456@192.168.0.1>

Configuration File ("Anonymous" <sip:anonymous@anonymous.invalid>)

```
SIP_ANM_DISPNAME_1="1"  
SIP_ANM_USERNAME_1="1"  
SIP_ANM_HOSTNAME_1="Y"
```



Making anonymous call

From : "Anonymous" <sip:anonymous@anonymous.invalid>