

How to set up the conference server

(KX-UT670)

No. 22-005

March 22 , 2012

Ver.1.0

Panasonic Corporation

Abstract about this document

This document describes how to set up the conference server to activate the N-way conference feature.

Revision history

Date	Version	Revision	Firmware version
Mar. 22, 2011	Ver. 1.0	Initial Release	01.033 or later

There are 2 methods to setup conference server setting in UT670.

- 1) with a configuration file
- 2) with web I/F (administrator access level is required)

1) Setting conference server by a configuration file

To activate Network Conference feature, URL/IP address of conference server is required to be configured in "CONFERENCE_SERVER_URI" field in a configuration file.

Once uploading the configuration file with the server information, the feature is ready.

Your server URI/address

```
CONFERENCE_SERVER_URI="conference_server@xxx.net"
```

upload



2) Setting Conference server by web I/F

Panasonic
KX-UT670

Status | Network | System | VoIP | Telephone | Maintenance

Web Port Close

Call Control

Telephone

- Call Control
 - Line 1
 - Line 2
 - Line 3
 - Line 4
 - Line 5
 - Line 6
- Tone Settings
- Telephone Settings

Call Control

Send SUBSCRIBE to Voice Mail Server Yes No

Conference Server URI

Inter-digit Timeout seconds

Timer for Dial Plan seconds

International Call Prefix

Country Calling Code

National Access Code

Default Line for Outgoing

Flash/Recall Button Terminate Flash Hook

Flash Hook Event Signal flashhook

Directed Call Pickup

Call Rejection Phone Numbers

1.	<input type="text"/>	2.	<input type="text"/>
3.	<input type="text"/>	4.	<input type="text"/>
5.	<input type="text"/>	6.	<input type="text"/>
7.	<input type="text"/>	8.	<input type="text"/>
9.	<input type="text"/>	10.	<input type="text"/>
11.	<input type="text"/>	12.	<input type="text"/>

Your conference server's URI/address

Appendix : How to operate conference calls by UT670

Operation

Conference Call

During a two-party call, you can add a third party and establish a conference call.

1. During a call, tap **[Conference]** on the **[Current]** tab.
2. Call the party you want to add to the call.
3. When the third party answers, tap **[Start Conference]**, and the three-party conference begins.

In addition, you can establish the N-party conference by repeating the above operation.

Note:

If party you are adding to the call does not answer, tapping the DN flexible button of the call on hold returns you to the two-party call or a previous conference.