

# How to update Firmware via SD card

(KX-UT670)

No. 22-017

Dec 22 , 2011

Ver.1.0

Panasonic Corporation

## Abstract about this document

This document describe about how to update F/W via SD card.

## Revision history

Date	Version	Revision	Firmware version
Dec.22, 2011	Ver. 1.0	Initial Release	All versions

# Update Firmware

1 : Copy a firmware to SD card and Insert it to a KX-UT670.

2 : [Home] --> [Menu] --> [Settings] --> [Administration]

【Note】 Since Version 1.022, a password is needed for Administration menu.

Default password is “adminpass”.

3 : Select “Update Firmware”

Then a firmware list is displayed on the screen.

4 : Select a firmware file.

5 : Push the “Update” button. After pushed, the KX-UT670 will be rebooted.

